
FERRARI
SF90 STRADALE

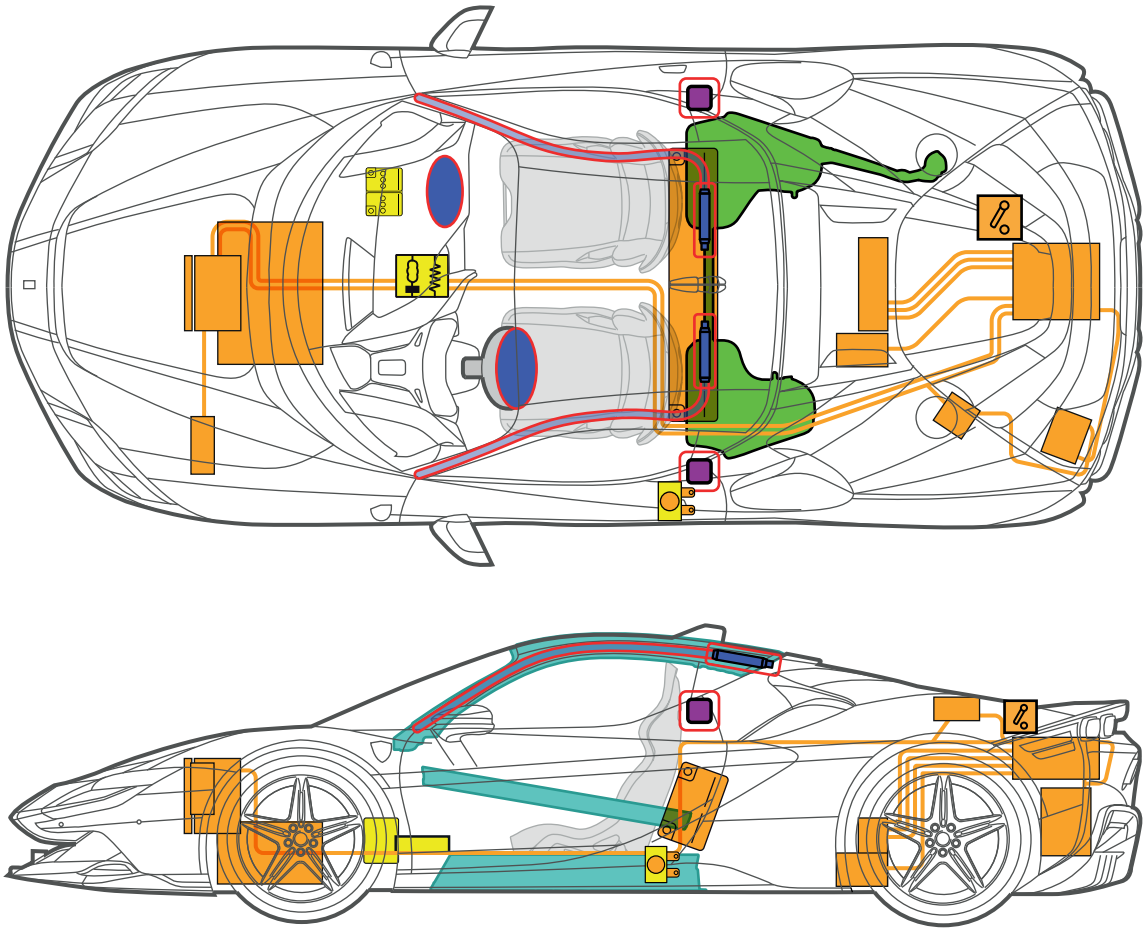





Airbag

Reinforcment bars and components

Airbag ECU

High voltage battery

Inflation components

Fuel tank

12V battery

High voltage cables and components

Pretensioners

High voltage emergency disconnect fuse

High Voltage service connector





HOW TO IDENTIFY THE VEHICLE

The wording “HYBRID VEHICLE” under the chassis number on the left hand side of the windscreen indicates that the vehicle is equipped with a high voltage hybrid system.






FERRARI
SF90 STRADALE





PROCEDURE FOR DEACTIVATING THE HIGH VOLTAGE SYSTEM


A. If the internal combustion engine is still running, turn the vehicle to Key-off state.

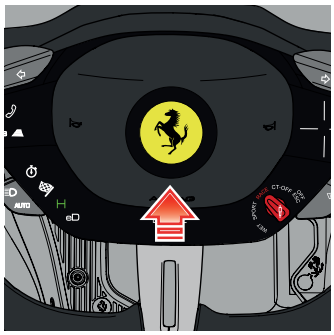





IMPORTANT: The vehicle may only be considered to be in KEY-OFF state if the engine is off and the message eD "READY" does **NOT** appear on the instrument panel.


B. Access the engine compartment and remove the cover on the cosmetic shield.

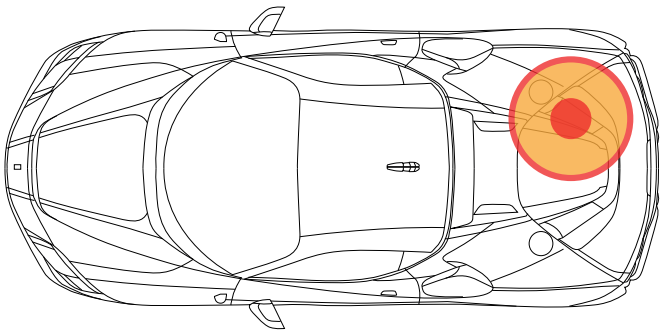

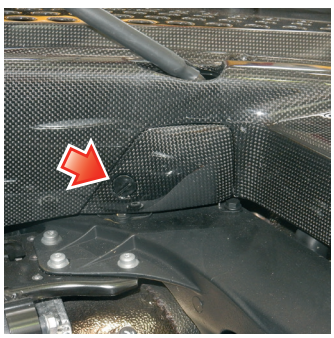

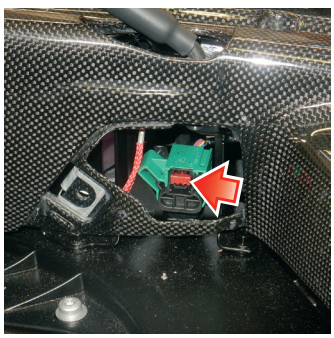

C. Pull out the HV connector as indicated on the specific label (**1**).

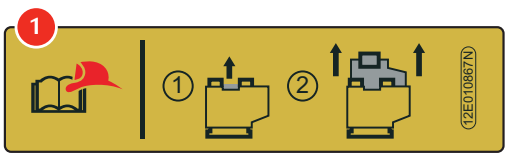


FERRARI
SF90 STRADALE






IF YOU CANNOT ACCESS THE ENGINE COMPARTMENT, DO THE FOLLOWING:


A. Remove the inspection cover to access the fuse box on the left hand rear flank panel.

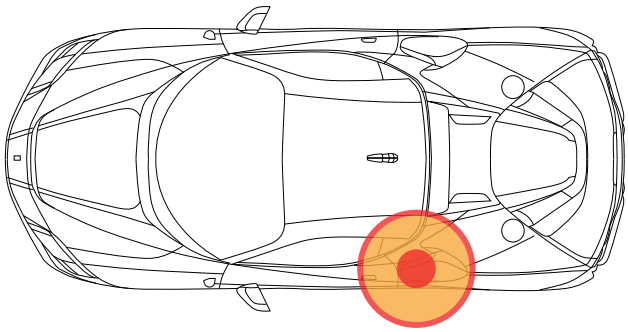

B. Remove the fuse with label (**2**).



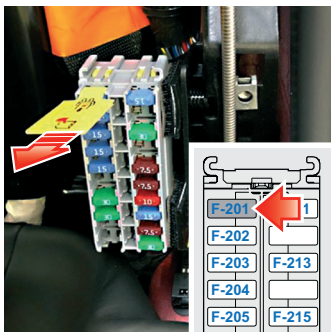

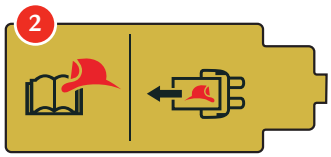

Edition 1
July 2020
Catalogue no: XXXX/20