INFORMATION FOR THE FIRST AND SECOND EMERGENCY RESPONSE TEAMS

EMERGENCY RESPONSE GUIDE FOR VEHICLE

Ferrari 296 SPECIALE

Ferrari 296 Speciale

PHEV

from 2025 to -



COPYRIGHT© 2025 - **FERRARI** S.p.A. - All rights reserved

Code no. 55073194
Catalog no. 9244/25

Ferrari Technical Service Department
Via Abetone Inferiore, 4
41053 Maranello Modena - Italy

CONTENTS


0. Rescue Sheet(s)	page 3
1. Identification / recognition	page 4
2. Immobilization / stabilization / lifting	page 4
3. Disable direct hazards / safety regulations	page 6
4. Access to the occupants	page 7
5. Stored energy / liquids / gases / solids	page 9
6. In case of fire	page 10
7. In case of submersion	page 11
8. Towing / transportation / storage	page 11
9. Important additional information	page 12
10. Explanation of pictograms used	page 13

0. Rescue sheet(s)

Ferrari 296 Speciale
PHEV
from 2025 to -






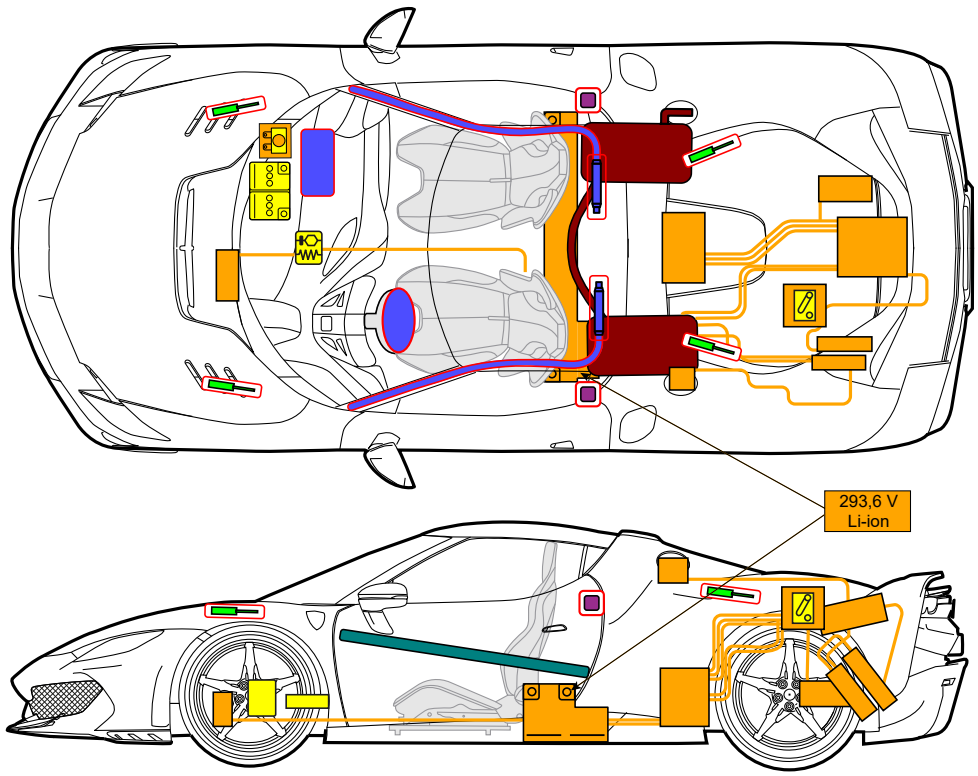

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
			Gas strut / Preloaded spring		High strength zone				
	Battery, low voltage								
	Battery pack, high-voltage		High voltage power cable				Fuse box disabling high voltage		
			Low voltage device that disconnects high voltage		Fuel Tank				

1. Identification / recognition

- **Position of model name**

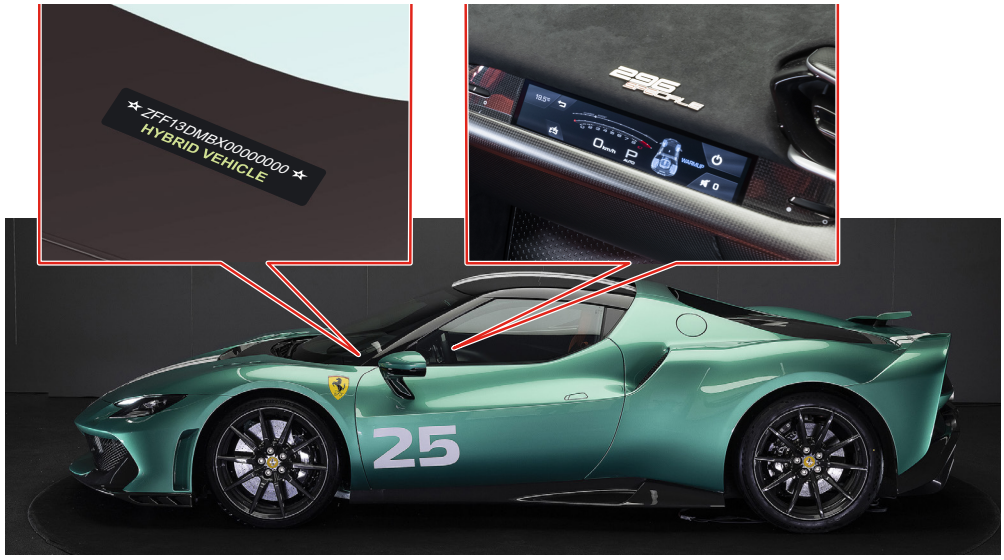

- **Power source:** Lithium ion batteries for the electric part and gasoline for the ICE part.
  The wording "HYBRID VEHICLE" under the V.I.N. number on the left hand side of the windshield indicates that the vehicle is equipped with a high voltage hybrid system.

The 296SPECIALE is equipped with a number of safety systems which have been designed to protect your safety. These features help to ensure safe access to the vehicle under various conditions.
However, whenever you have to intervene on a damaged hybrid vehicle which has been involved in an accident or fire or in rescue or recovery situations, always assume that the vehicle's high voltage system is powered up.

2. Immobilization / stabilization / lifting

- **Completely immobilize the vehicle:**
  If possible, stabilize the vehicle by applying the electric parking brake before deactivating the 12V electrical system: press the brake pedal firmly and pull the lever with symbol Ⓟ on the dashboard to the left of the steering wheel.



- NEVER assume that the vehicle is turned off simply because it does not make a noise.
- NEVER touch the cables, connectors or high voltage system components with your bare hands.
- A failure to deactivate the high voltage system before performing normal emergency response procedures may result in serious burns or electrocution which can also be fatal.
- If you have to touch a high voltage system cable, connector or component, always wear suitable Personal Protective Equipment.

- **How to determine whether the vehicle is ON/OFF:**
  Check the instrument panel lighting



The vehicle can only be considered to be in KEY-OFF state if the engine is off and the message eD "READY" does NOT appear on the instrument panel.



- **Lifting points:**

Given the aerodynamic shape of the undertray, access to the support points for lifting is not easy: to lift the vehicle, we recommend contacting technicians with suitable equipment to work in complete safety.
If the vehicle has to be lifted following an accident or in order to perform emergency repair work, we recommend passing on the following information to the people who will be performing the work:


- Never lift the vehicle by pressing on the bottom of the high voltage battery. There is a risk of serious and even fatal injury.
- To lift the vehicle, use only the support points indicated below.


Failure to comply with the above may cause serious injury.

Be very careful when lifting the vehicle to avoid damaging the parts near the support points.

Never lift the vehicle using the support points near the high voltage battery which is in the central rear area.

To lift the vehicle, use the points shown in the figure.

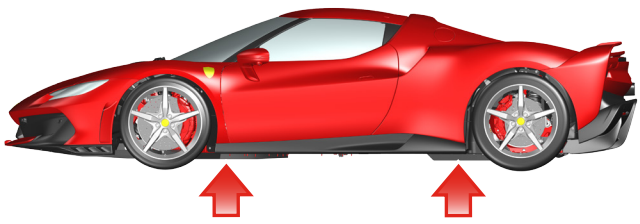

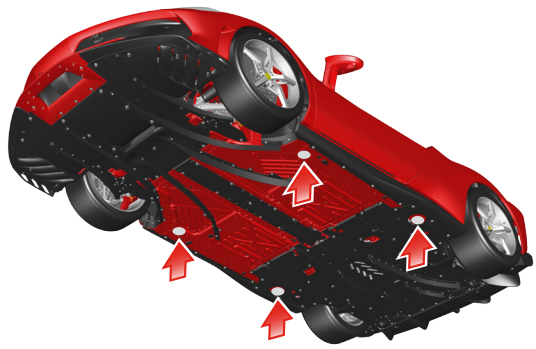

3. Disable direct hazards / safety regulations

When deactivated with the High Voltage (HV) service connector or by removing the low voltage fuse, the high voltage system does not discharge immediately. Wait at least 30 seconds before performing any work on the vehicle.
Do not touch or cut any components. There is a risk of serious and even fatal injury.

To deactivate the high voltage system, do the following:

- Open the door on the driver side.
- If the vehicle is still running, perform a KEY-OFF.




The vehicle can only be considered to be in KEY-OFF state if the engine is off and the message eD "READY" does NOT appear on the instrument panel.




- Open the engine compartment lid by pulling lever **A** on the driver side door pillar.
- The lid is held open by two damper struts **B**.
- Access the engine compartment.



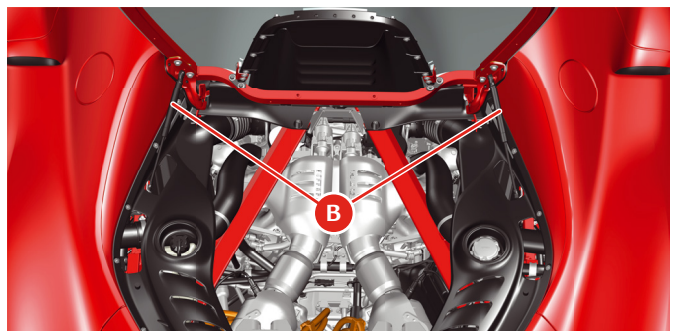

The procedure for deactivating the high voltage system with the High Voltage (HV) service connector must only be performed by technicians in possession of valid Ferrari High-Voltage Technician (F-HVT) certification, or other valid certification (issued by accredited organization) for working on hybrid/electric vehicles and high voltage systems, and who have the necessary equipment to operate in complete safety.

- Go to the HV service connector and pull the release device shown in the figure out, as indicated on label (**1**) affixed to the trim panel.

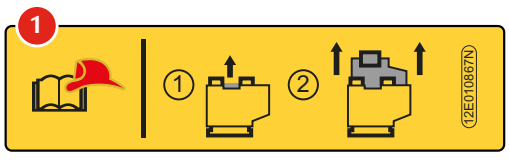





■ Alternative emergency procedure


If the HV connector is not accessible, follow the procedure described below:

The procedure for removing the low voltage fuse which deactivates the high voltage system must only be performed by technicians in possession of valid Ferrari High-Voltage Technician (F-HVT) certification, or other valid certification (issued by accredited organization) for working on hybrid/electric vehicles and high voltage systems, and who have the necessary equipment to operate in complete safety.
Only follow this procedure if you cannot access the HV service connector in the engine compartment.

- Remove the passenger footrest by unscrewing the four fixing screws.
- Remove the fuse box cover **C**.
- Remove fuse **D** shown in the figure with label (**2**) affixed to it.

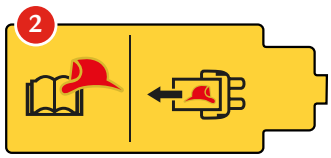

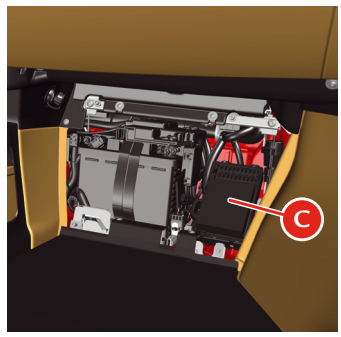

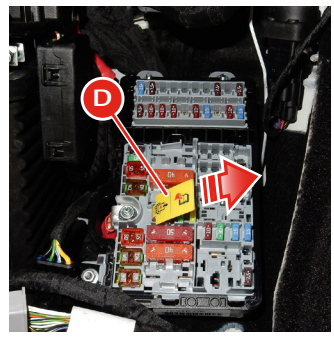


4. Access to the occupants


Do not cut, touch or work on the high voltage components. IF YOU DO, there is a real risk of even fatal injury.

Do not cut the hybrid system high voltage battery: There is a risk of serious and even fatal injury.

If vehicle components have to be removed, NEVER touch any of the high voltage system components or the high voltage cables. There is a risk of serious and even fatal injury.

■ High strength zone on bodywork

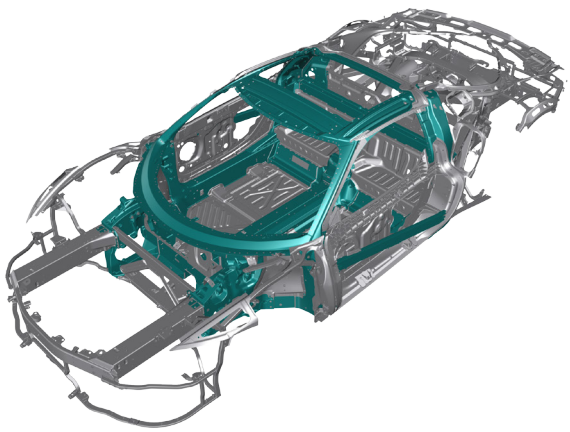

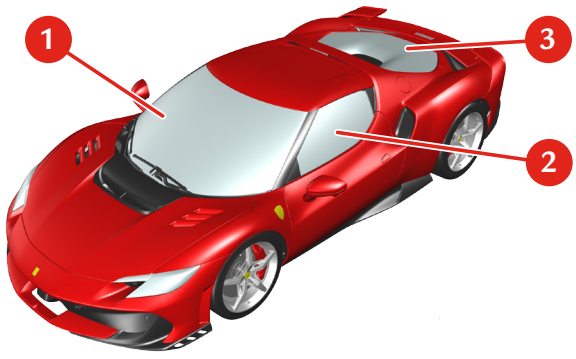

■ Zones NOT subject to cutting:


Do not cut the bodywork near the airbag and the high voltage system. See first page

■ Windows:

1. Laminated glass
2. Tempered glass
3. Polycarbonate (Lexan)

■ Type of bodywork:

Steel and aluminum and carbon fiber

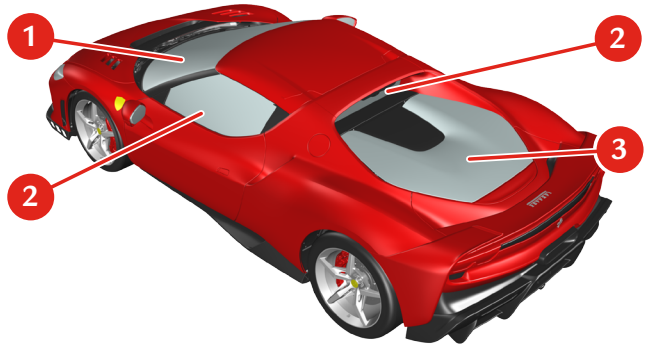

■ Seat adjustment:

Racing seat

- Back/forward adjustment

Pull lever **4 upward** and slide the seat forward or backward to the desired position. Release the lever and gently rock the seat back and forth to check that it is securely locked.


- Seat back rake adjustment


Turn the knob **5** clockwise or counterclockwise to set the required backrest rake angle.

- Tilting the backrest


To tilt the backrest, pull the strap **6** up and push the backrest toward the front of the car. Returning the backrest to its original position will automatically lock it in place.

- The height of the driver seat can be adjusted with control **7**.

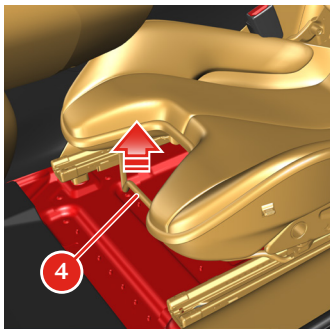

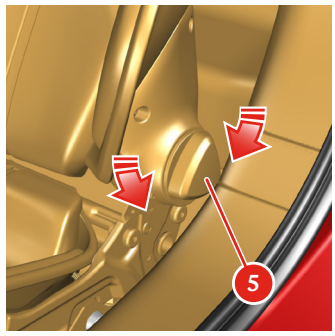



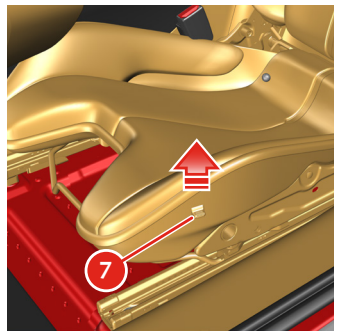


Seat (optional - if available)


- Back/forward adjustment

Pull lever **8 upward** and slide the seat forward or backward to the desired position. Release the lever and gently rock the seat back and forth to check that it is securely locked.

- Seat back rake adjustment

Turn the knob **9** clockwise or counterclockwise to set the required backrest rake angle.

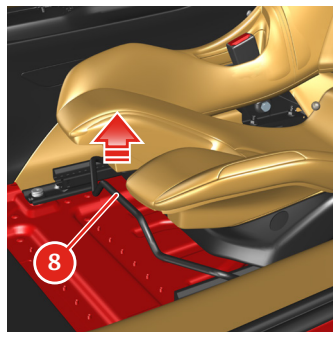

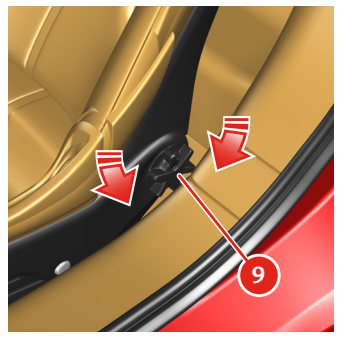


■ Steering wheel adjustment:


The steering wheel can be adjusted for rake and reach.


Mechanical adjustment


- Unlock ( ) the lever shown underneath the steering column by pushing it toward the dashboard.
- Adjust the position of the steering wheel.
- Lock ( ) the steering wheel by pulling the lever toward you until it locks into place.

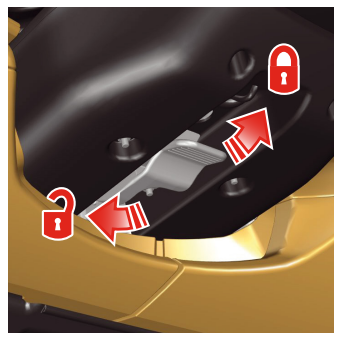



- **Auxiliary occupant protection systems:**
- 3-point driver and passenger seat belt (with pretensioner and an automatic system that reduces the force applied to the occupant);
- 4-point driver and passenger seat belt (with load limiting device) - (**optional - if available**);
- Seat with built-in headrest;
- driver-side lateral head protection airbag
- passenger head protection lateral airbag (head bag);
- driver-side and passenger-side dual-stage front airbags;
- electronic control unit (ECU);
- additional sensors;
- airbag system failure warning light;
- body with crumple zones.

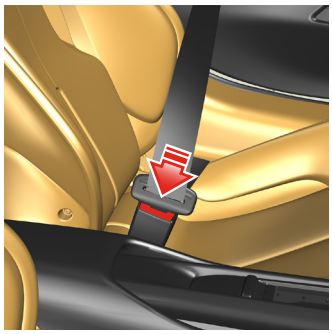


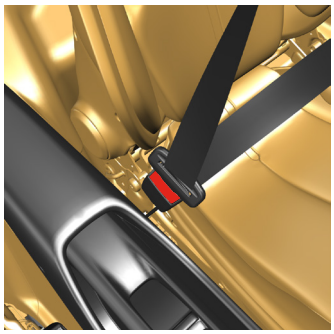

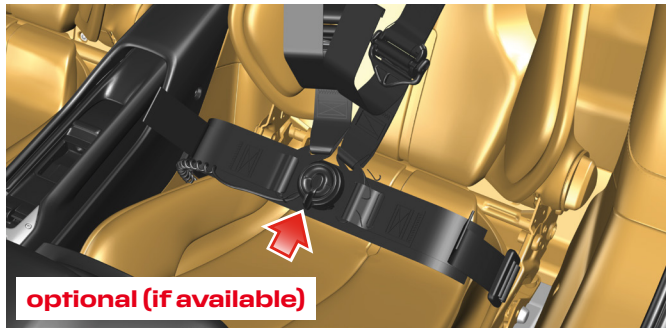


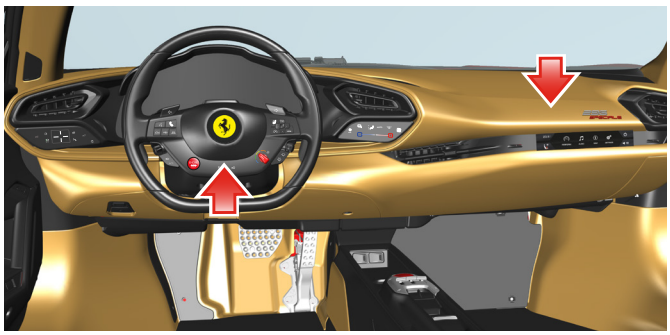

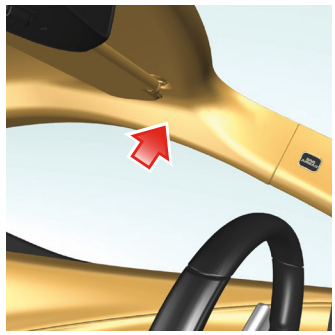

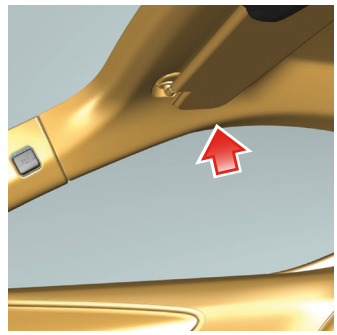

5. Stored energy / liquids / gases / solids

	Capacity	Hazard
12 V LI ION battery 	40 Ah	
293.6 V LI ION battery 	26.2 Ah	
A/C system 	(R-1234yf) 1200 ± 20 g	
Front Airbag Inflator 	-	
Side Airbag Inflator 	-	
Fuel Tank 	17 US Gal (64.5 L)	

- Under normal conditions of use, the battery poses no risk of exposure to its contents.
- In addition to a conventional 12V electrical system, the vehicle also has a 330 V high voltage system. High voltage is extremely dangerous and may cause serious burns and a violent electric shock which can result in serious or fatal injury. The high voltage electrical system and high voltage battery are dangerous and may cause burns, other serious injuries or death. Never attempt to remove or tamper with the high voltage cables (**with orange covering)**, the high voltage battery, connectors or any other component in the high voltage electrical system, especially if it appears to be damaged.
- Electrolyte or battery acid is corrosive. Avoid contact with skin, eyes or clothing. Wear appropriate protective clothing. Specifically, wear protective gloves, an apron and face protection. In case of contact, rinse any splashes of electrolyte or acid off immediately with clean water. Seek immediate medical attention.
- Do not inhale any gases produced by the battery.
- The following safety measures must be observed when handling the battery.
  - Do not immerse the battery in liquids.
  - Do not expose the battery to temperatures of over 122°F: do not incinerate the battery.
  - Do not allow the internal temperature of the battery to drop to below -40 °F.
  - Short circuits and physical damage are the most common causes of malfunction when handling the battery.
  - Appropriate PPE (personal protective equipment) (e.g., nitrile gloves and eye protection) must always be worn when handling the battery.
  - Metallic jewelery (e.g., rings, bracelets, watches, necklaces, etc.) that may come into contact with the metal parts of the battery should be removed or covered with a non-conductive material; keep all non-essential metal objects away from the battery and take care when using metal objects such as tools in the vicinity of the battery.
  - Never touch a damaged battery.
- Exposure to high voltage components can cause electric shock and burn injury or even death. These components may only be repaired by technicians with specific training on working with high voltage systems.
- DO NOT tamper with the high voltage battery. DO NOT remove the screws on the battery or the high voltage protection guards. DO NOT dismantle the high voltage battery.
- The battery pack cover must not be broken or removed under any circumstances, including fire. This may cause severe electrical burns, electric shock or electrocution.

6. In case of fire




Use large amounts of water

In the event of a fire, immediately contact the fire emergency responders and follow the steps below to start to extinguish the fire.
If you cannot apply large amounts of water to the high voltage battery, we recommend letting the battery fire burn itself out.



HIGH VOLTAGE BATTERY:
RE-IGNITION IS POSSIBLE!



■ Vehicle fire extinguisher (optional)

Never use sea water or salt water.

When using the fire extinguisher, keep a safe distance from the flames.
To use the extinguisher, follow the instructions written on it.



If the fire is limited in size, a powder-based fire extinguisher suitable for extinguishing class A, B, C fires caused by electrical cables or components, etc. or oil may be used.



7. In case of submersion

If the vehicle is immersed completely or partially in water, do not touch any high voltage system cables, connectors or components.

Normally, contact with the bodywork of a hybrid vehicle submerged in water does not pose a high voltage risk and normal extrication procedures can therefore be performed and the vehicle safely moved by following these recommendations:

- remove the vehicle from the water;
- if possible, let the water drain out of the vehicle;
- follow the procedures for stabilizing the vehicle and deactivating the high voltage system.


■ See Section 3.


8. Towing / transportation / storage


■ Transport


Towing the vehicle is not permitted. Towing can cause serious damage to the vehicle and the high voltage hybrid system.

The tow hook supplied with the vehicle may only be used in an emergency to load the vehicle onto a recovery truck or flatbed trailer.

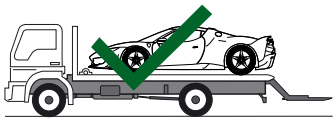


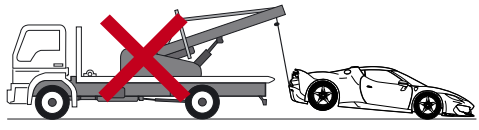

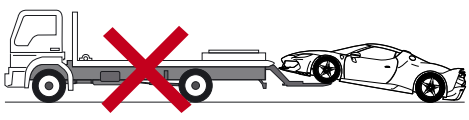



**HIGH VOLTAGE BATTERY:
RE-IGNITION IS POSSIBLE!**



■ Towing

To tow the vehicle onto a recovery vehicle, avoid using anchor points that are not designed for the tow hook inserted in the housing on the front bumper.


Do not use the levers, suspension and wheel rims but only the tow hook properly fitted in place.

1. take the tow hook out of the tool bag:
2 make sure that the area is free of dirt and screw the tow hook fully into the threaded hole in the right hand front grill, which can be accessed through the specific aperture;
3. if it is not engaged before KEY-OFF, release the parking brake (EPB) by pulling the lever on the dashboard and pressing the brake pedal.





Maximum angles of tow of the tow hook in the two tow levels: 25° and 5°.

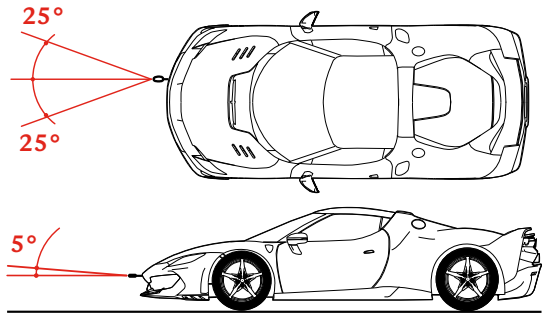

If there is an electrical system failure, release the electric parking brake (EPB) and Park Lock manually.
If the electrical system is still working, perform a KEY-OFF before towing.
Only if necessary and if the electrical system is still working, leave the instrument panel on (KEY-ON) to enable the lights to work; when towing the vehicle, do not try to start the engine.



Please note that with the engine turned off, the brake system is not fully functional.

When towing the vehicle, you must comply with Road Regulations.

9. Important additional information

- **Auxiliary occupant protection systems:**
  See Section 4
- **Service:**
  Make sure that all maintenance work and inspections are performed by the FERRARI AUTHORIZED NETWORK. FERRARI recommends contacting an Authorized Ferrari Dealer, available on the official FERRARI website (https://www.ferrari.com).

10. Explanation of pictograms used

	Safety-related information: General warning sign		Risk of flammability
	Risk of electrocution		Risk of explosion
	Warning: Low temperature		Risk of acute toxicity
	ABC fire extinguisher		Hazardous to human health
	Use water to extinguish the fire		Risk of corrosive substances/materials
	Air conditioning component		Risk of gases under pressure
	Open the luggage compartment lid		Open the engine compartment lid
	To indicate that an infrared camera must be used to detect a fire		